

The diagram illustrates the electrical connections for the steering column switch center (A72). It shows the following components and their connections:

- A4010 Junction box:** The top of the diagram shows the junction box with terminals 35, 52, 38, and 22.
 - Terminal 35 is connected to terminal 4 of the steering column switch center.
 - Terminal 52 is connected to terminal 2 of the steering column switch center.
 - Terminal 38 is connected to terminal 11 of the multifunction steering wheel.
 - Terminal 22 is connected to terminal 12 of the multifunction steering wheel.
- A4010a:** A sub-component of the junction box.
- SP_SIG 0.35 GE/WS:** Two yellow square symbols representing ground connections.
- 31 0.35 GE/SW:** A yellow square symbol representing a ground connection.
- 31 0.35 SW/BL:** A blue square symbol representing a ground connection.
- X14272:** A brown wire connecting terminal 52 to terminal 2.
- X14271:** A brown wire connecting terminal 38 to terminal 11.
- X6021:** A brown wire connecting terminal 12 to terminal 11.
- X6459:** A black arrow pointing right from terminal 11.
- A72 Steering column switch center:** A central component with terminals 4 and 2.
- I01032 Switch block multifunction steering wheel, left:** A component with terminals 11 and 12.
- I01091 Rocker switch, left:** A component with terminals 11 and 12.

