

The diagram illustrates the electrical connections for the steering column switch center (A72). It shows the following components and their wiring:

- A4010 Junction box:** The top connection point, with terminals 35, 52, 38, and 22.
 - Terminal 35 is connected to **SP_SIG** (0.35 GE/WS) via a yellow wire.
 - Terminal 52 is connected to **X14272** (31 0.35 GE/SW) via a yellow wire.
 - Terminal 38 is connected to **X14271** (31 0.35 SW/BL) via a blue wire.
 - Terminal 22 is connected to **SP_SIG** (0.35 GE/SW) via a yellow wire.
- A72 Steering column switch center:** The central component with terminals 4 and 2.
 - Terminal 4 is connected to the junction box terminal 35.
 - Terminal 2 is connected to the junction box terminal 52.
- X1880:** A component connected to terminals 4 and 2 of the steering column switch center.
- I01032 Switch block multifunction steering wheel, left:** Connected to the steering column switch center via three wires (yellow, blue, and black).
- I01091 Rocker switch, left:** Connected to the steering column switch center via three wires (yellow, blue, and black).
- Intermediate Connections:**
 - A yellow wire connects the junction box terminal 35 to the steering column switch center terminal 4.
 - A yellow wire connects the junction box terminal 52 to the steering column switch center terminal 2.
 - A blue wire connects the junction box terminal 38 to the steering column switch center terminal 2.
 - A black wire connects the junction box terminal 22 to the steering column switch center terminal 2.

