
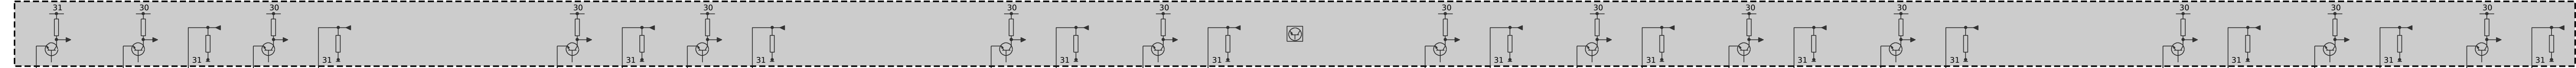


X11001

15<7  
0.35  
GN/WS

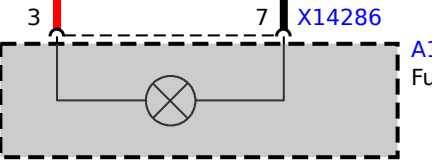

**A12**  
Multiple restraint system control unit

**X18069**  
POL  
0.35  
SW/GN

**ABF1+**  
0.5  
GR/SW

**ABF1-**  
0.5  
GR/BR

**ABF2+**  
0.5  
GE/SW

**ABF2-**  
0.5  
GE/BR

**X10170**

**A72**  
Steering column switch center

**ABF1+**  
0.5  
GR/SW

**ABF1-**  
0.5  
GR/BR

**ABF2+**  
0.5  
GE/SW

**ABF2-**  
0.5  
GE/BR

**X01071**

**G5**  
Driver's airbag gas generator

**ABBF1+**  
0.5  
BL/SW

**ABBF1-**  
0.5  
BL/BR

**ABBF2+**  
0.5  
WS/SW

**ABBF2-**  
0.5  
WS/BR

**X782**

**G6**  
Front passenger airbag gas generators

**SIAF+**  
0.5  
GE

**SIAF-**  
0.5  
BR

**GSF+**  
0.5  
GE/RT

**GSF-**  
0.5  
GE/BR

**X10216**

**G12**  
Driver belt tensioner gas generator

**SIABF+**  
0.5  
BL

**SIABF-**  
0.5  
BR

**GSBF+**  
0.5  
BL/RT

**GSBF-**  
0.5  
BL/BR

**X10217**

**G13**  
Front passenger belt tensioner gas generator

**GSHL+**  
0.5  
GE/SW

**GSHL-**  
0.5  
GE/BR

**GSHR+**  
0.5  
GN

**GSHR-**  
0.5  
BL/GN

**X10542**

**G27**  
Belt pretensioner, rear left

**CUL+**  
0.5  
GE

**CUL-**  
0.5  
BL/GE

**CUR+**  
0.5  
WS

**CUR-**  
0.5  
BL/WS

**X10399**

**G17**  
Left head airbag gas generator

**X18069**

**SBK+**  
0.5  
BL

**SBK-**  
0.5  
BR

**X1770**

**G19a**  
Gas generator safety battery terminal